

INSTRUCTION FOR DIY WOODEN TELEPHONE BOOTH MONEY BOX (30WBOOTH)



Materials Supplied in the Kit:

Plain wooden parts:

- 1 x top cover;
- 4 x upper rim bars;
- 4 x body panels;
- 4 x bottom rim bars;
- 1 x bottom piece
- 1 x plastic plug
- 1 x TELEPHONE sign
- 1 x crown sign





Materials & Tools needed but not included in the kit:


- PVA Glue and applicator, tissue or cloth for cleaning
- Red, white and gold paints and paint brush
- Black marker
- Decorative items

Procedure:


1. Assemble the body panels:

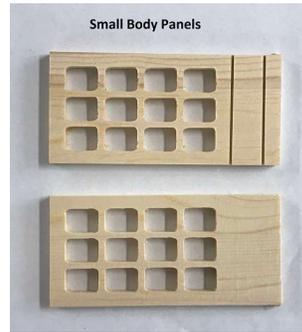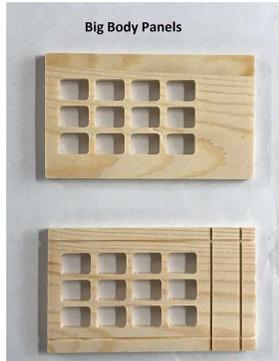

- 1.1 Apply PVA glue along the longer edge of the small body panel. Carefully stick onto the longer edge of the big panel. Note: The side with carved decorative lines will face outside, the smooth side inside.
- 1.2 Stick a small body panel onto each longer edge of the big panel. Again, the smooth side will face inside and the side with carved decorative lines will face outside. Align the decorative lines on each panel.
- 1.3 Stick the other big panel onto the edges of two small panels to seal the body of the booth. Wipe off excessive PVA glue with a piece of tissue paper or cloth. Put aside and leave the glue to dry. Wait for at least 15 minutes until use the assembled body panels for next step.

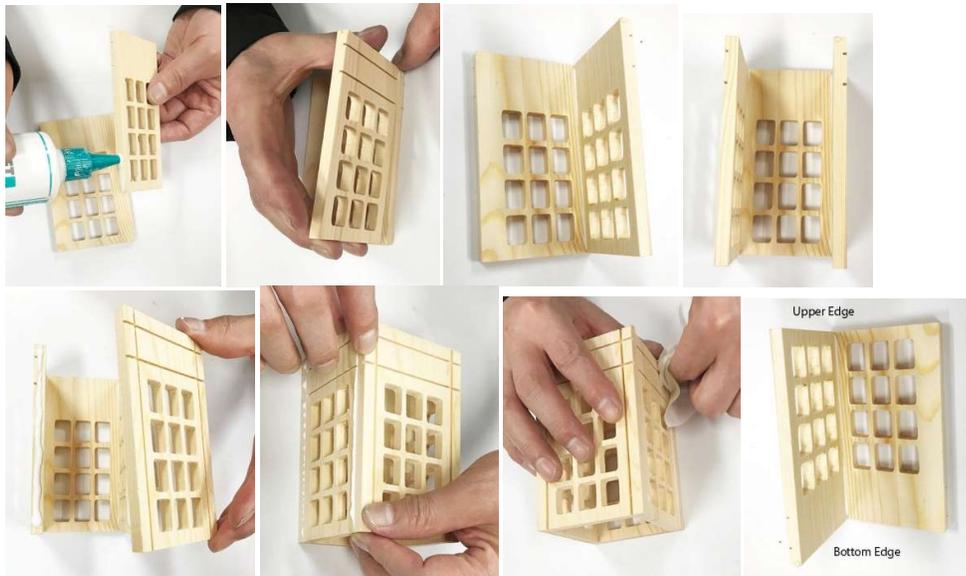


2. Assemble the bottom frame:

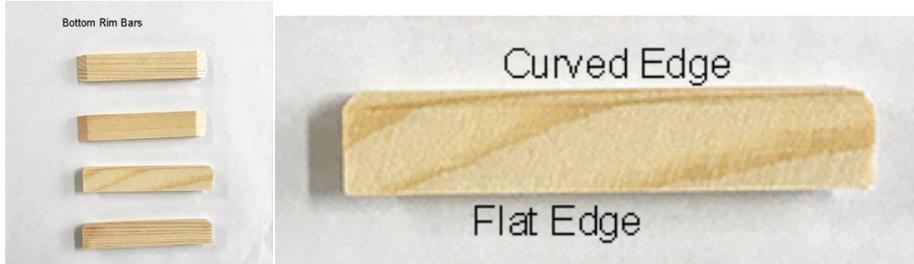


- 2.1 Apply PVA glue to the tilted ends of the bottom rim bars. Stick them together to form the bottom frame. Pay attention to the difference of two edges of the bottom rim bars. Make sure to align flat edge with flat edge and curved edge with curved edge when assembling.
- 2.2 Wipe off excessive PVA glue with a piece of tissue paper or cloth. Put aside and leave the glue to dry. Wait for at least 15 minutes until use the assembled bottom frame for next step.




3. Assemble the upper rim:

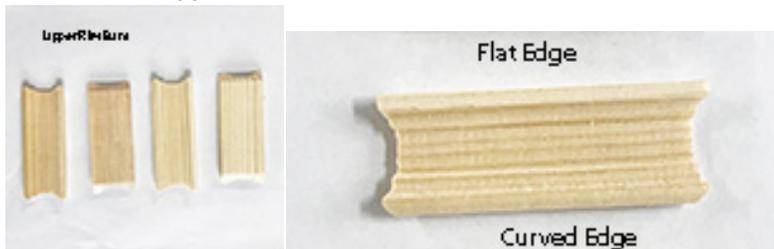

- 3.1 Apply PVA glue to the tilted ends of the upper rim bars. Stick them together to form the upper rim frame. Pay attention to the difference of two edges of the upper rim bars. Make sure to align flat edge with flat edge and curved edge with curved edge when assembling. Also note the difference of two sides of the upper rim bars. The side with carved decorative lines will face outside, the smooth side inside.
- 3.2 Wipe off excessive PVA glue with a piece of tissue paper or cloth. Put aside and leave the glue to dry. Wait for at least 15 minutes until use the assembled upper rim for next step.

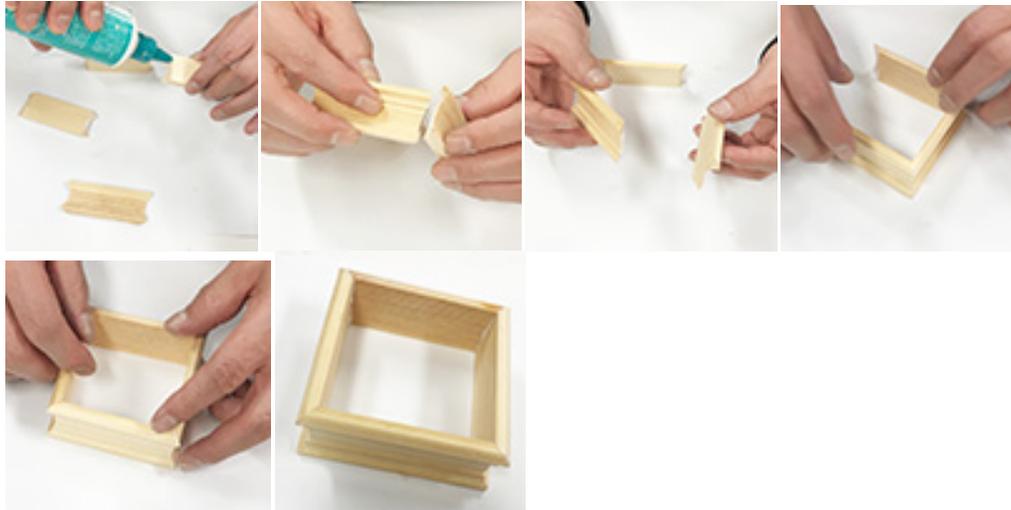

4. Assemble the booth:

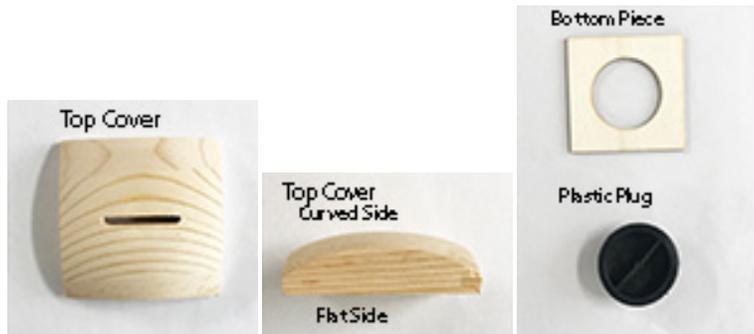

- 4.1 Put the top cover on the table with flat side facing up.
- 4.2 Apply PVA glue along the edges of the top cover, on the flat side.
- 4.3 Carefully place the upper rim frame onto the top cover. Note: The upper rim frame has two different edges: curved and flat. Stick the flat edge to the top cover.
- 4.4 Apply PVA glue to the upper edge of the assembled body panels. The edge near the lattice window shall be the upper edge.
- 4.5 Press the upper edge of the body panels onto the upper rim frame.
- 4.6 Wipe off excessive PVA glue with a piece of tissue paper or cloth. Put the assembled top cover, upper rim and body panels aside and leave it dry for at least 15 minutes.
- 4.7 Apply PVA glue to the curved edge of bottom frame.
- 4.8 Turn around the assembled top cover, upper rim and body panels. Press the bottom edge of the body panels to the curved edge of the bottom frame.
- 4.9 Wipe off excessive PVA glue with a piece of tissue paper or cloth. Leave it dry for at least 15 minutes.
- 4.10 Turn the assembled booth upside down again. Apply PVA glue to the bottom edge of the body panels, inside the bottom frame.
- 4.11 Stick the bottom piece to the bottom edge of the body panels, inside the bottom frame.
- 4.12 Wipe off excessive PVA glue with a piece of tissue paper or cloth. Leave the assembled booth upside down over night until PVA glue in all parts is dry.

- 4.13 Insert the plastic plug to the hole of bottom piece. Turn the booth around.
- 4.14 Paint the booth with red paint. Multi-layers painting may be needed to get better coverage. Leave to dry.
- 4.15 Paint the crown sign in gold and paint the TELEPHONE sign in white. Leave to dry. Outline the TELEPHONE letters with a black marker.
- 4.16 Stick the crown sign and TELEPHONE sign onto the painted booth, like shown in the picture.
- 4.17 A British telephone booth money box is now done! Insert spare coins in to the slot on the top cover. Unplug from the bottom, you can retrieve the coins you save.



